

WHEEL STRAP SENSOR INSTALLATION





Follow these installation steps after registering a sensor.

Step 1

Place the strap around the wheel with the black dot sticker pointing in the forward direction of travel.

Step 2

Align the sensor with the valve stem.

Step 3

Tighten the clamp and secure the strap in a flat area of the wheel with the smallest diameter.

Step 4

Cut off any extra length if the strap is too long.

Step 5

Re-install the tire, being careful not to damage the sensor.